


MODELS VT610101, VT610201, VT611500, VT611600, VT910201, VT910101

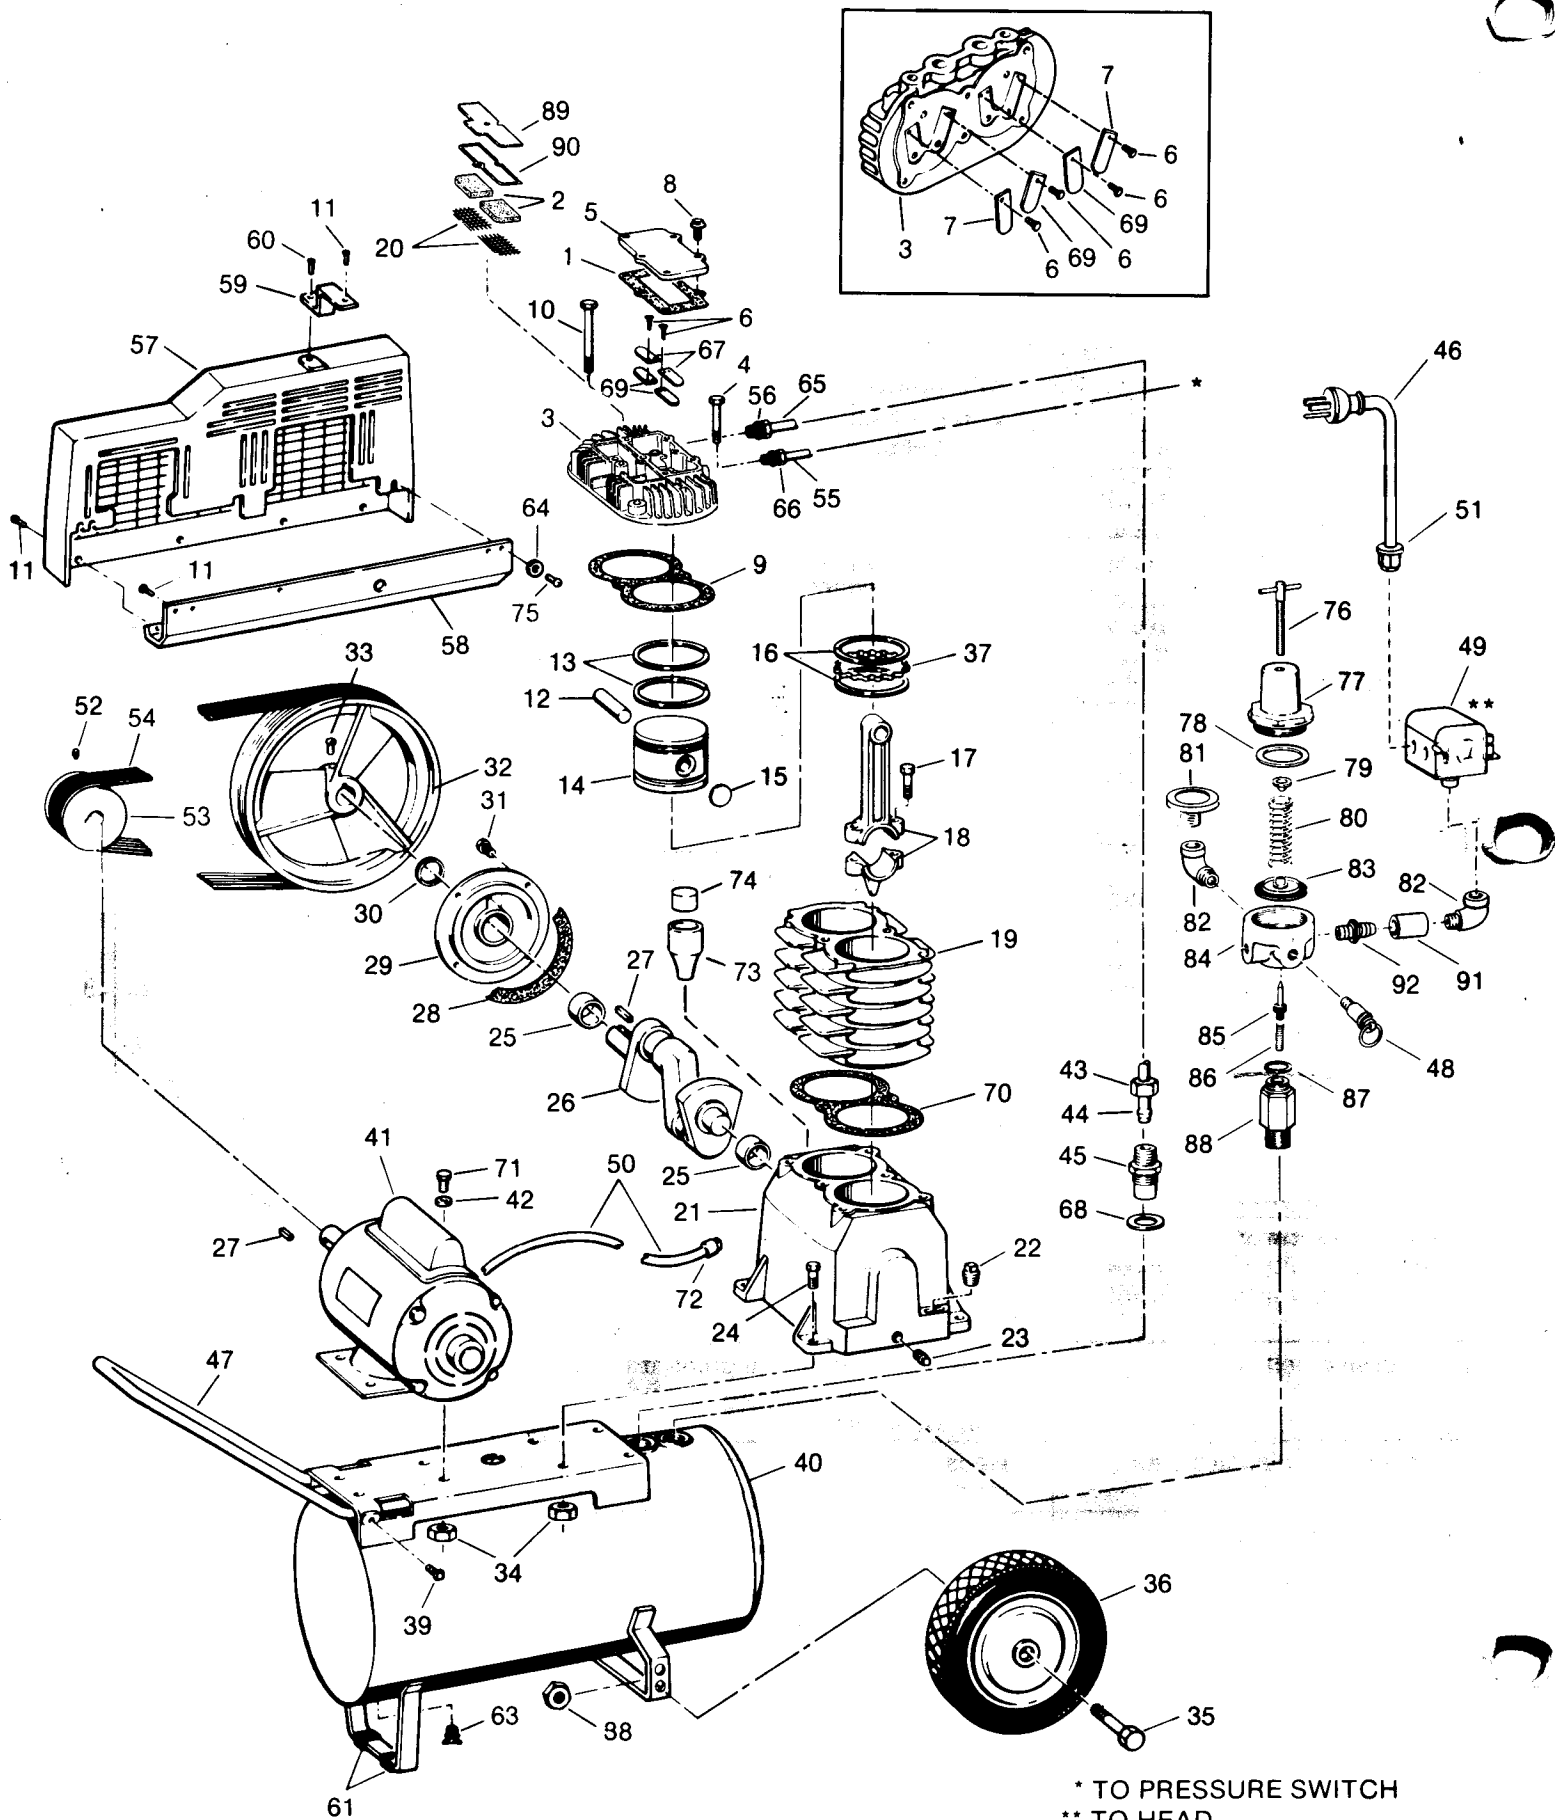

PARTS LIST

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	XA007100AV	Head Plate Gasket	53	PU009000BK	Pulley 1.8 (VT610101, VT611500, VT910101)
2	VT013005AV	Filter (2 used)			
3	VT015001AG	Cylinder Head (Exc. VT611600)		PU005800BK	Pulley 2.0 (VT610201, VT910201)
	VT015002AG	Cylinder Head (VT611600)		PU000900BK	Pulley 2.125 (VT611600)
4	*ST021800AV	Hex Head Cap Screw 5/16-18 (5 used)	54	BT005000AV	Belt 39" Poly V (VT610101, VT910201, VT910101)
5	VT012900AV	Head Top Plate		BT004500AV	Belt 41" Poly V (VT610201, VT611500)
6	*ST073231AV	Screw 5-40 Slotted Pan Head (12 used)		BT0003100AV	Belt 49" Poly V (VT611600)
7	VS001800AV	Flapper Valve (2 used)	55	VT022600AP	Tube, Unloader (Exc. VT611600)
8	*ST074402AV	Screw 1/4-20 x 5/8" (5 used)		VT022700AP	Tube, Unloader (VT611600)
9	XA003300AV	Cylinder Gasket	56	ST018300AV	Compression Connector 1/2" Tube
10	*ST074302AV	Screw 5/16-18 x 6"	57	BG012400AV	Belt Guard (Exc. VT611600)
11	*ST042400AV	Screw, Self Tap 10-24 x 5/16 (10 used)		BG012200AV	Belt Guard (VT611600)
12	VS001400AV	Piston Pin (2 used)	58	BG011300AV	Belt Guard Channel (Exc. VT611600)
13	PX001100AV	Compression Ring (4 used)		BG009500AV	Belt Guard Channel (VT611600)
14	VT005500AG	Piston (2 used)	59	BG014014AL	Belt Guard Bracket
15	ST019700AV	Welch Plug (4 used)	60	ST058500AV	Plascrew
16	PX002200AV	Oil Ring (4 used)	61	ST041600AV	Foot (2 used)
17	ST050100AV	Hex Head Cap Screw 1/4-20 x 1-1/4	63	*ST030100AV	Drain Cock
18	VT000100AG	Connecting Rod (2 used)	64	ST109003AV	Conical Serrated Washer (2 used)
19	VT000700AG	Cylinder (Exc. VT611600)	65	VT017200AP	Tube 1/2" (Exc. VT611600)
	VT009600AG	Cylinder (VT611600)		VT023300AP	Tube 1/2" (VT611600)
20	VT013203AV	Filter Screen (2 used)	66	*ST011701AV	Compression Connector 1/4" Tube
21	VT200401AJ	Crankcase W/Bearing 2-3/4" (Exc. VT611600)	67	VT021500AV	Valve Restrictor
	VT200400AJ	Crankcase W/Bearing 3" (VT611600)	68	XA001400AV	Check Valve Gasket
22	*ST022000AV	Pipe Plug, Hex Head 1/4"	69	VS001801AV	Flapper Valve (4 used)
23	*ST022300AV	Pipe Plug, Square Head 1/8"	70	XA008800AV	Gasket, Cylinder to Crankcase
24	*ST016000AV	Bolt 5/16-18 x 3/4" (4 used VT610201, VT611500, VT611600)	71	*ST016000AV	Bolt 5/16-18 x 1/2 (4 used VT610201, VT611500, VT611600)
	*ST016500AV	Self Tap Screw 5/16-18 x 3/4 (4 used VT610101, VT910201, VT910101)	72	ST043200AV	Strain Relief
25	ST068300AV	Bearing, Sleeve (Exc. VT611600)	73	VT014400AV	Breather Vent Tube
	ST021700AV	Bearing, Needle (VT611600)	74	VT014500AV	Breather Vent Filter
25A	ST068300AV	Bearing, Sleeve (Exc. VT611600)	75	ST051300AV	Screw 10-24 x 3/8" (2 used)
	ST051100AV	Bearing, Needle (VT611600)	76	RE002900AV	Pressure Adjusting Screw
26	VT000600AG	Crankshaft (Exc. VT611600)	77	RE003200AG	Regulator Top
	VT006600AG	Crankshaft (VT611600)	78	XA004300AV	Friction Washer
27	*KE000900AV	Key 3/16 Square x 1"	79	RE002400AV	Spring Plate
28	XA003200AV	Bearing Cap Gasket	80	RE002300AV	Spring
29	VT200301AJ	Bearing Cap Assembly W/Bearing (Exc. VT611600)	81	GA015502AV	Gauge
	VT500100AJ	Bearing Cap Assembly W/Bearing (VT611600)	82	ST071202AV	Street Ell
		Oil Seal	83	RE240100AJ	Diaphragm Assembly
30	ST021600AV	Cap Screw 1/4-20 x 1/2" (4 used)	84	RE003401AG	Regulator Body
31	*ST024200AV	Flywheel 10"	85	RE008000AV	Valve
32	PU006300BK	Square Head Set Screw 3/8-16 x 3/4	86	DH007600AV	Spring
33	*ST026200AV	Hex Nut 5/16-18 (8 used VT610201, VT611500)	87	XA000300AV	Gasket
34	*ST018700AV	Axle Bolt (2 used)	88	RE005700AV	Adapter
		Wheel 10" (2 used)	89	VT023400AV	Inlet Valve Cover Plate
35	ST033400AV	Expander 2-3/4" (Exc. VT611600)	90	XA009500AV	Gasket
36	WA002500AV	Expander 3" (VT611600)	91	ST071506AV	Coupling 1/4" NPT
37	PX002100AV	Hex Keps Nut (2 used)	92	HF002400AV	Connector 1/4" NPT x 1/4" NPT
	PX002000AV	Set Screw 1/4-20 x 1/2			
38	ST033500AV	Air Receiver 11 Gal. (VT610101, VT910101, VT910201)		HA212600AV	Hose 1/4" x 15'
39	*ST012200AV	Air Receiver 20 Gal. (VT610201, VT611500)		JB200101AV	Air Chuck
40	AR012406JU	Air Receiver 20 Gal. ASME (VT611600)		ST033800AV	Ground Clip
	AR012401JY	Electric Motor (VT610201, VT910201)			
	AR015000JY	Electric Motor (VT610201, VT910201)			
41	MC005600AV	Electric Motor (VT611600)		VT232704JY	Replacement Pump (Exc. VT611600)
	MC035600AV	Electric Motor (VT611600)		VT510702JY	Replacement Pump (VT611600)
	MC006900AV	Washer (4 used)			
42	*ST011200AV	Compression Connector 1/2" Tube			
43	*ST033001AV	Ferrule 1/2" Tube			
44	ST067300AV	Check Valve			
45	CV201400AJ	Power Cord 115 Volt (Exc. VT611600)			
46	EC002100AV	Power Cord 230 Volt (VT611600)			
	EC007301AV	Handle			
47	VS001000AV	ASME Safety Valve (Exc. VT611600)			
48	V-201700BL	ASME Safety Valve (VT611600)			
	V-203600BL	Pressure Switch (Exc. VT611600)			
49	CW207554AV	Pressure Switch (VT611600)			
	CW207553AV	Switch Cord (Exc. VT611600)			
50	EC008004AV	Switch Cord (VT611600)			
	EC008000AV	Strain Relief			
51	ST043200AV	Socket Set Screw 1/4-20 x 1/2			
52	*ST009500AV				

NOT ILLUSTRATED

AVAILABLE ON REQUEST

*Standard Hardware Item. May be purchased locally.

OR UN207531 AV